

FLOORS MANAGER

Please try this method of working. Note, in Plan Element mode, each view is treated separately when working with floors/layers/buildings!

The ACTIVE floor is marked in blue and will always display. If you want other floors visible with ACTIVE floor then select them from list or uncheck any you want hidden. Ensure you choose the option SELECTED in the VISIBLE FLOORS drop down (circled)

To change the ACTIVE floor to another e.g Floor 2, left-click Floor 2 from list above and click the button SELECT THIS FLOOR. Floor 2 will be marked blue and become the active floor.

LAYERS MANGER - see over

LAYERS MANAGER

Buildings, Floors, Apartments and Layers Manager

Building

- <Standard>
- Ground floor
- Floor 2

Apartment

Layers

- Outline
- Cut edge
- Cut surface
- Construction view
 - Construction
 - Roofs
 - Dimension
 - Guidelines
 - Landscape
 - Drawing border

Visible Layers : Selected

Protected Layers : Selected

Choose this layer!

Name: Guidelines

Description:

Lock Element from Further Editing

Same line properties for all elements

Colour: [Color] Thickness: Hair line

The ACTIVE layer is marked in blue and will always display. If you want other layers visible with ACTIVE layer then select them from list or uncheck any you want hidden. Ensure you choose the option SELECTED in the VISIBLE LAYERS drop down (circled)

The CONSTRUCTION layer is normally the default layer that is active as this contains the main construction elements e.g. walls.

Close